


DUO

60 & 100

NAVIGATOR / DC + AC

60 or 100 litres/hour

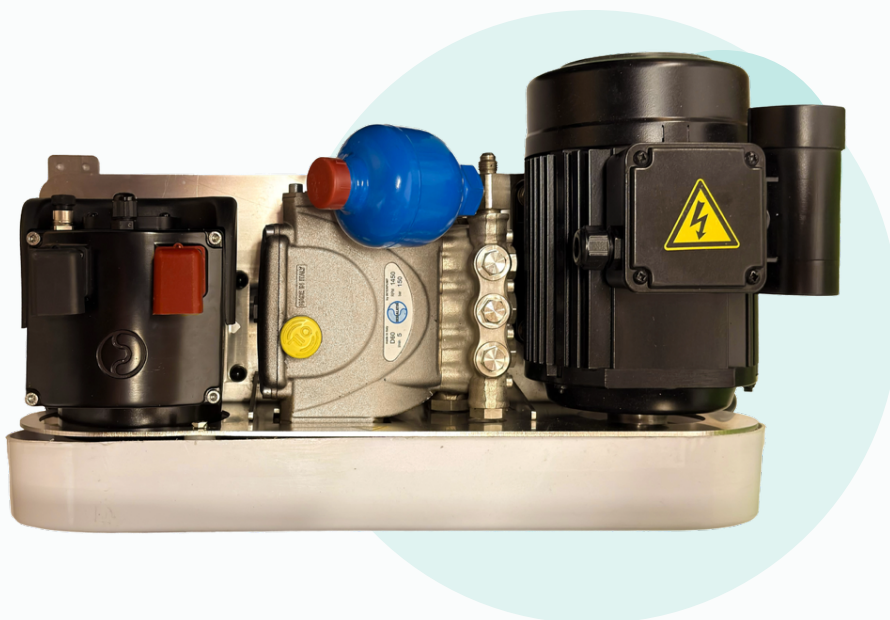

VERSION V6.0 EN • OCTOBER 2026

Commissioning and operation

Procedures and guidance for operating your watermaker.

02 Before starting

04 Stop without rinsing

06–07 Micro Remote and LEDs

03 Starting

05 Stop with rinsing

08 Prefilter and manual rinse

01 COMMISSIONING

01

Before starting

Check that the valves are open

Carry out this check before starting the watermaker.

01 PRIME THE CIRCUIT IN EACH OF THESE CASES



Before the first use



After replacing the filter



After the boat has been hauled out



After a long period of disuse


Prime for 2 minutes with fresh water, watermaker stopped

With the watermaker stopped, operate the prefilter three-way valve to fill the circuit with fresh water for 2 minutes. Open the pressure regulator counterclockwise, stopping 1/4 turn before the left-hand stop.

Once the circuit is full, return the valve to the seawater position (see page 8).

Seawater

Water production

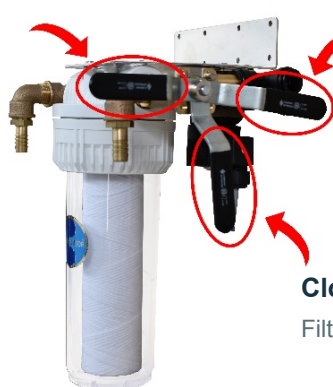

Fresh water

Rinsing or sterilization

Closed

Filter replacement

02 ELECTRICAL SUPPLY

Take account of the battery capacity and the operating time.

Over 5 minutes: engine or battery charger running

When operating on 12 or 24 V for more than 5 minutes, you must run either the boat engine or the battery charger supplied by shore power or a generator.

02 PRODUCTION

02

Starting the watermaker

Automatic pressure regulation

The motorized regulator adjusts the pressure. Manual adjustment temporarily disables automatic mode; automatic operation resumes the next time the watermaker is used.

1 Select the power supply

Set the switch to 12/24 V (DC) or 230 V (AC). Depending on the equipment, the AC supply may be 120 V.

2 Allow the pressure to increase automatically

The pressure regulator moves the gauge needle into the green zone.

This procedure takes about 3 minutes.

3 Check the quality of the produced water

After the water has been checked and found to be of good quality, the watermaker starts producing fresh water.

What affects fresh water output

Output depends on seawater temperature and salinity, as well as the quality of the voltage supplied to the motor.



About 3 minutes

03 STOPPING

03

Stopping without rinsing

If you use your watermaker regularly, you do not need to rinse the membranes.

1

Set the switch to OFF

The watermaker stops.



Selector to OFF

After more than 10 days: rinse before restarting

Rinse before the next start-up. Follow the manual rinse procedure on page 8.

For shutdown with rinsing, follow the procedure on page 5.

04 MEMBRANES

04

Stopping with rinsing

Rinse if the planned shutdown exceeds 10 days

Rinse the watermaker if it will not be used for more than 10 days.

1 Keep the watermaker on until rinsing starts

After production, turn the pressure regulator knob counterclockwise until automatic rinsing starts.

2 Check that the green and yellow LEDs are on


These LEDs on the control panel indicate that rinsing has started.

3 Allow 30 seconds for rinsing

The watermaker performs the rinse cycle automatically.

4 Wait for the green and yellow LEDs to go out

At the end of the cycle, only the blue switch LED remains flashing. If you have no Micro Remote, you can then set the switch to OFF.

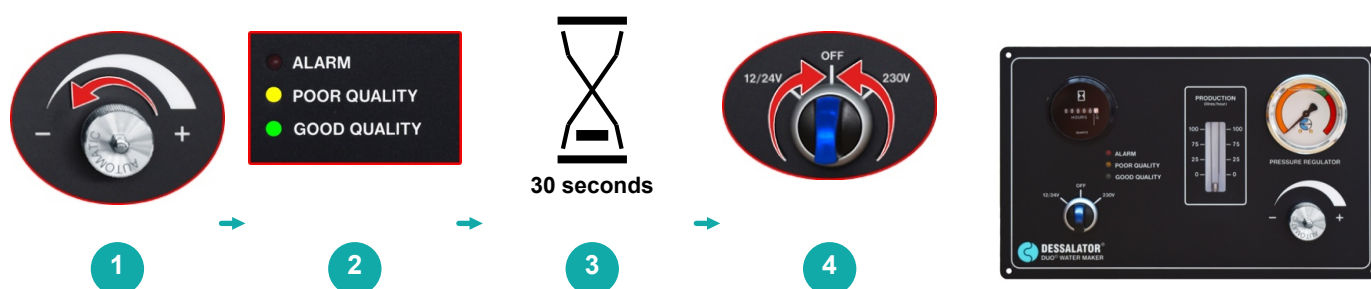

After more than a month: rinse for 2 minutes

After more than a month of disuse, a 2-minute rinse is essential (see page 8). For extended storage, sterilize the membranes (6 months maximum) or rinse at least once a month.

05 OPTION

Using the Micro Remote

05

After the first start-up at the control panel, use the Micro Remote to monitor and control the system remotely.




Automatic pressure regulation

Pressure must increase gradually to protect the membranes. Remote starting and rinsing require automatic pressure regulation.


01 STOP WITHOUT RINSING

Use the DC or AC button for the active power supply. Hold the on/off button for about 2 seconds (2 beeps), then release: the watermaker stops and enters STANDBY.

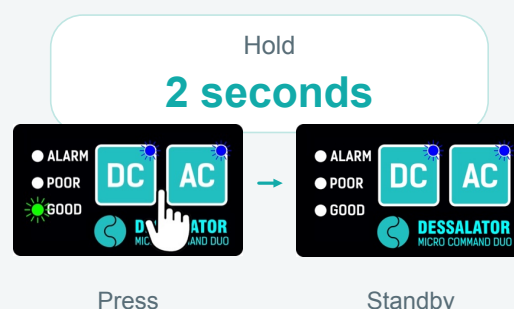

02 RESTART FROM STANDBY


Use the DC or AC button for the active power supply. From STANDBY, hold the button for about 2 seconds. The blue LED flashes and 2 beeps sound. Release to start.

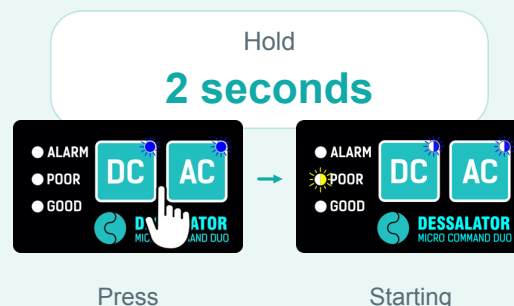

03 STOP WITH RINSING

Automatic pressure regulation required

Use the DC or AC button for the active power supply. Hold for about 5 seconds until the yellow and green LEDs light up and a long beep sounds. Release: the watermaker stops, rinses, then enters STANDBY.

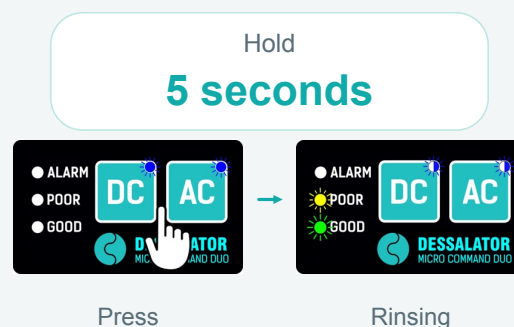

06 MICRO REMOTE

06

Understanding the LEDs

The RED, YELLOW and GREEN LEDs show the same information as on the watermaker control panel.

● Flashing yellow LED

The yellow LED flashing rate indicates the water pressure in the circuit.

The faster it flashes, the higher the pressure.



● Green LED on

The water produced is of good quality.



The blue button LED indicates the selected supply: DC or AC.

READING THE ILLUSTRATION SYMBOLS

 
On



Flashing



Off



07 APPENDIX

07

Prefilter and manual rinsing

SELECTING THE PREFILTER VALVE POSITION

Seawater


Water production

Fresh water

Rinsing or sterilization


Closed

Filter replacement

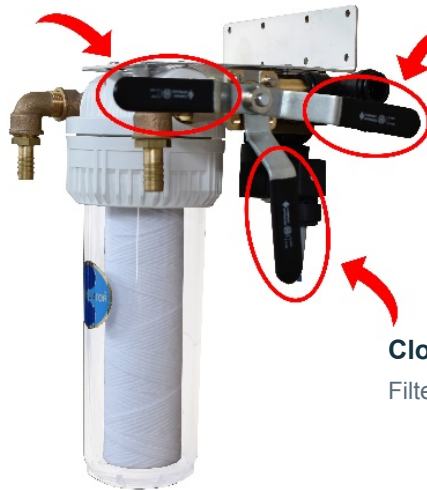

RINSING MANUALLY WITH FRESH WATER

With the watermaker stopped, move the valve handle to the fresh water position for manual rinsing. Always return the handle to the seawater position before restarting.

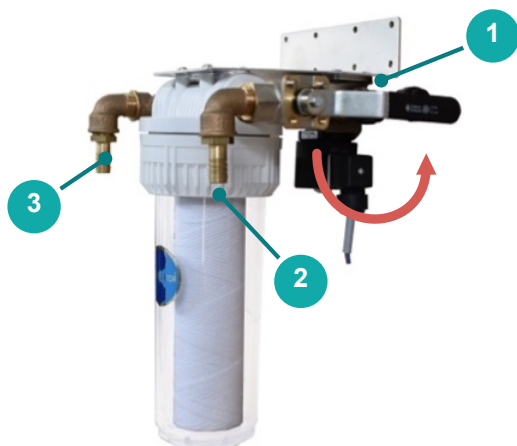

1 Fresh water inlet

2 Seawater inlet

3 To the HP pump

Manual rinse and sterilization

Turn the handle to the fresh water position.