


DUO DC-AC

D60 & D100

INSTALLATION AND OPERATING MANUAL

OPTIMA & NAVIGATOR

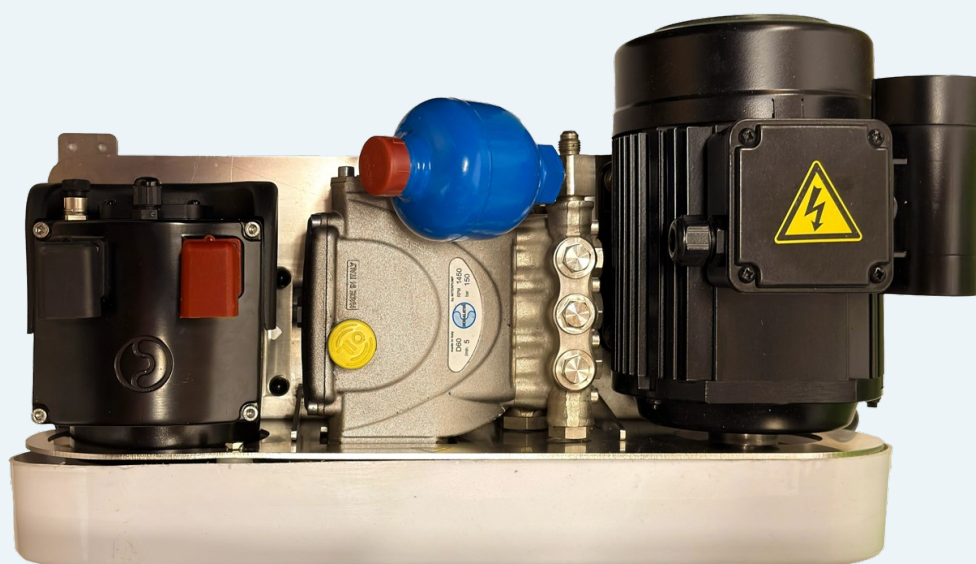

60 / 100 L/h

Nominal output

**12 / 24 VDC
120 / 230 VAC**

Power supply

Optima & Navigator

Model

Installation • Operation • Maintenance

ENGLISH EDITION

Version 4.2 EN • 10/2026

www.dessalator.com

READING GUIDE

Contents

1	Overview and operation	3	5.5	Optional Micro Remote Control	21
2	Safety and precautions	4	5.6	Starting with Micro Remote Control	22
3	Component identification	5	5.7	Stopping with Micro Remote Control	23
3.1	Seacock and prefilter	5	6	Operating conditions	24
3.2	Control panel and motors	6	7	Maintenance and storage	25
3.3	Membranes and hoses	7	7.1	Membranes, frost and HP pump	25
4	Installation	8	7.2	Manual flushing	26
4.1–4.3	Preparation and water circuits	8	7.3	Membrane preservation	27
4.4	Motor/pump assembly	11	7.4	ST2 cartridge and recommissioning	28
4.5	Electrical supply · DC / AC	12	8	Parts and accessories	30
4.6	AC connections	14	9	Troubleshooting and indicators	31
4.7–4.8	Membranes and controls	15	A1	High-pressure fittings	33
5	Commissioning and controls	17	A2	Wiring diagram	34
5.1	Before starting	17	A3	DUO D60 installation	35
5.2	Manual start-up	18	A4	DUO D100 installation	36
5.3	Auto mode / stop without flushing	19		Manufacturer and contact details	37
5.4	Stopping with flushing	20			

DUO DC-AC / D60 & D100 / OPTIMA & NAVIGATOR / 12 / 24 VDC AND 120 / 230 VAC

1

1 OVERVIEW

How the system works

This manual describes the installation, operation and maintenance of DUO DC-AC D60 and D100 watermakers, in Optima and Navigator versions, powered by 12 or 24 VDC and 120 or 230 VAC.

Understanding reverse osmosis

Seawater is pressurised and fed into the membranes, which act as “molecular sieves”, allowing only fresh water molecules to pass through.

Most dissolved solids cannot pass through the membranes. They are discharged with the reject water.

Reverse osmosis is designed to reject 99% of impurities back to the sea.

Producing fresh water

The fresh water produced by your reverse osmosis system is suitable for consumption. If stored in your tanks, it may be treated as necessary with commercially available products, following the manufacturer's dosage instructions.

We offer a remineralisation cartridge for prolonged consumption of the product water.

The water flow path



Filtering and pressurising

Seawater is drawn in through the inlet seacock and then passes through the 5-micron prefilter. The high-pressure pump then pressurises the filtered water in the membrane housing (operating pressure within the green zone on the pressure gauge).

Separating

Pressurised water passes through the openings in the membrane surface, leaving behind salt and bacteria. These are discharged to sea with the remaining solution, which also flushes the membranes.

Checking and diverting

The fresh water passes through a sensor that measures its salt content. If it is sufficiently desalinated, the three-way valve switches automatically to send fresh water to the tanks. If the salinity sensor detects excessive salt content (conductivity above 1,000 µS), the valve discharges the product water overboard.

Performance: Fresh water flow is monitored by a flowmeter on the control panel. Fresh water output ratings are specified at a water temperature of 25°C. Output decreases by 2.5 to 5% for each degree Celsius drop in temperature.

25 °C

Reference temperature

2.5 to 5 %

less output for each degree drop in temperature

2

2 SAFETY

Essential precautions**ELECTRICAL SAFETY**

Never work on live equipment! Disconnect the power supply to the entire installation.

Before switching on

Check that the valves are open.

Suitable feed water

Use of this system in muddy or polluted water, at river mouths or in brackish water is prohibited. Avoiding these conditions helps prevent prefilter fouling and membrane damage.

FLUSHING

All flushing procedures must be carried out with the motor/pump assembly stopped. Pressurised fresh water is particularly harmful to the membranes.

Protecting the membranes

Do not expose the membranes to temperatures below 0°C or above 60°C. After first use, they must remain immersed. See the operating conditions in section 6 and maintenance in section 7.

Identifying your version

The 12 V and 24 V DC connections are shown in section 4.5, and the 120 V and 230 V AC connections in section 4.6. For remote controls, see sections 5.5 to 5.7.

3.1

3 COMPONENT IDENTIFICATION

Seawater inlet and prefiltration

Seacock


Install as low as possible in the boat to prevent air being drawn in.

On a motorboat, install towards the stern; on a sailing boat, install centrally near the keel. The slots in the intake strainer must face towards the bow so that seawater is scooped in while underway.

The seacock strainer prevents large particles from entering the system.



Cartridge prefilter

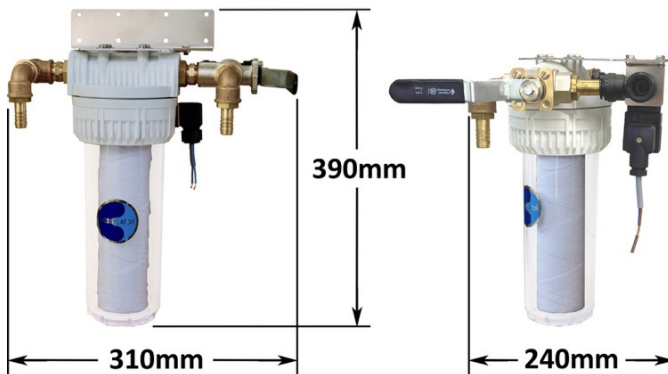

Dimensions and clearance for opening the filter bowl

Location: Install as close as possible to the seacock and below the waterline for better output. If this is not possible, fit an optional feed pump. The prefilter traps solid particles in seawater down to 5 microns before they enter the motor/pump assembly.


Equipment: Supplied with a spanner for tightening and loosening the filter bowl. Fitted with a solenoid valve for automatic flushing and a 3-way valve.

3.2

3 COMPONENT IDENTIFICATION

Control panel and motors

Control panel

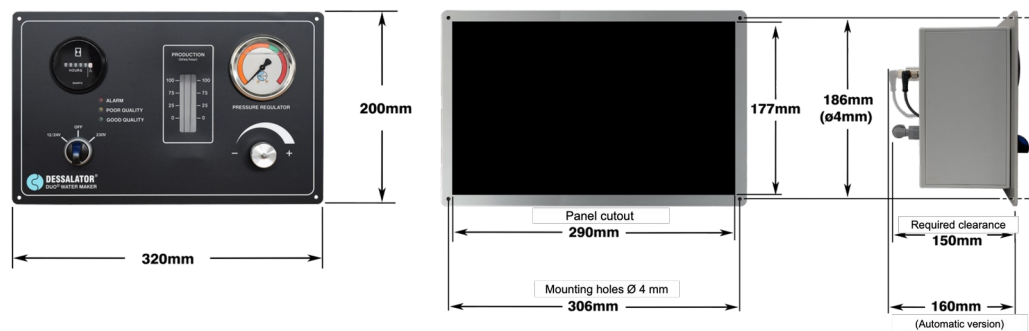

Measurement and monitoring


- A high-pressure gauge.
- A flowmeter.
- An operating hours counter.

Adjustment and control


- A pressure adjustment knob.
- An on/off switch.
- Three status indicators.

Motor/pump assembly

12 VDC + 120 / 230 VAC MOTORS

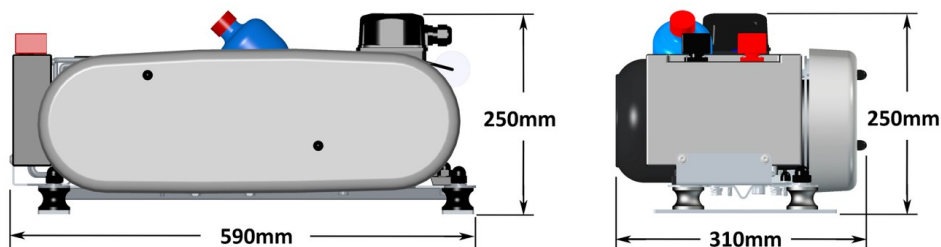

24 VDC + 120 / 230 VAC MOTORS

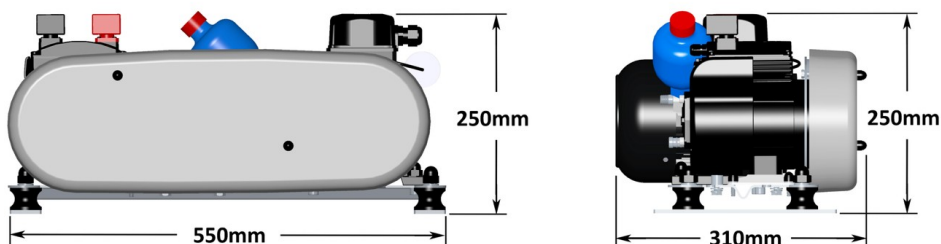

Preferably install below the waterline for optimum output.

The assembly has two motors: 12 or 24 V and 230 or 120 V. Install it in a well-ventilated space. A fuse holder is supplied.

NOTE


If the motor assembly cannot be installed below the waterline, an optional feed pump is recommended.

3.3

3 COMPONENT IDENTIFICATION


Membranes and hoses

D60 · 2 MEMBRANES

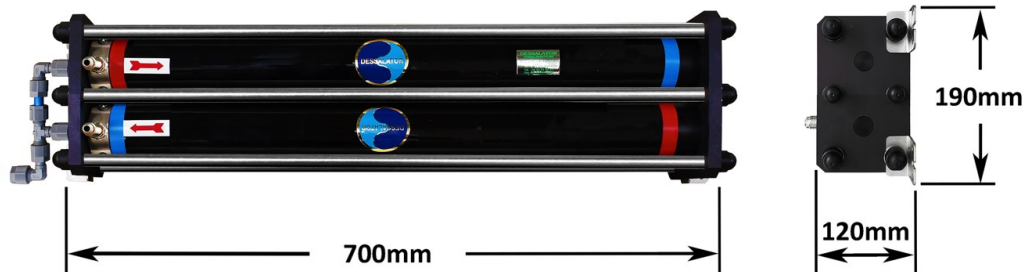

The compact D60 membrane assembly contains 2 seawater membranes.

D100 · 3 MEMBRANES

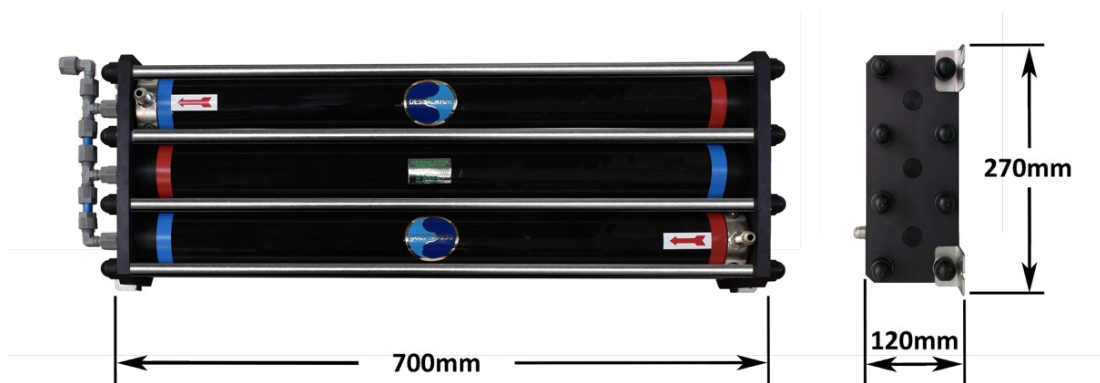

The compact D100 membrane assembly contains 3 seawater membranes.

Hoses supplied by Dessalator®

High pressure: High-pressure hose connects the pump to the membranes and the membranes to the control panel. An 8-metre hose is supplied and must be cut into two sections. Determine each section's length according to the distance between the components.

Supplied fittings: 4 special DESSALATOR® high-pressure hose fittings* (see the fitting assembly procedure in Appendix A1).

Swivel fitting: * Including one 90° elbow for the back of the control panel, which can be oriented through 360°.

Fresh water output: A 6-metre product water hose connects the membrane assembly outlet to the control panel.

4.1

4 INSTALLATION

Preparation and seacock

Items required for installation

Fasteners and consumables

Assorted screws (Parker self-tapping screws and others).

Assorted stainless steel hose clamps, Ø 8–16 mm and Ø 12–22 mm.

Assorted electrical cable ties.

PTFE tape.

Loctite 542 liquid or 577 paste.

Protection, hoses and tools

Polyurethane sealant, Sicalflex or equivalent.

Corrugated protective conduit for electrical cables and high-pressure hoses.

Tricoclair reinforced flexible hose with 10 mm and 12 mm internal diameters and a 3 mm wall thickness.

Power cables: 35 to 50 mm² for 12 V; 35 mm² for 24 V, depending on cable length.

Assorted tools (drill, saws, Ø 21 mm hole saw, etc.).

Seawater inlet seacock

Location: Fit the strainer as low as possible below the waterline to prevent air being drawn in. Keep it away from the boat's discharge outlets.

Drilling: Drill through the hull with a Ø 21 mm hole saw.

Orientation: The slots in the strainer must face towards the bow so that seawater is scooped in while underway.

Sealing and protection: Seal the hull joint thoroughly with polyurethane sealant or **Sicalflex**. **Remember to coat the submerged section with suitable underwater paint.**


Access: Keep the seacock accessible for maintenance.

Fittings: Seal the seacock/strainer and seacock/hose-tail joints with Loctite 577.

4.2

4 INSTALLATION

Cartridge prefilter

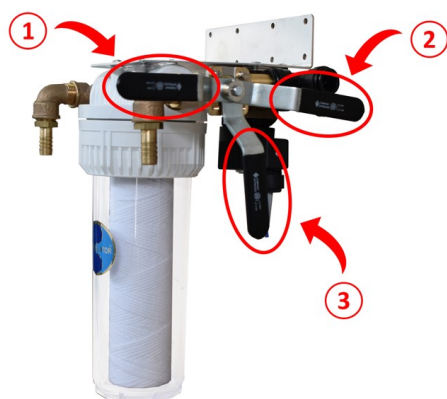

- 1** Seawater position — desalination mode.
- 2** Fresh water position — manual flushing or preservation; see section 7.2.
- 3** Closed position — filter cartridge replacement; see section 7.4.

Installation and connections

Location: The prefilter must also be installed below the waterline for better output. It must be easy to access.

Mounting: The mounting bracket is reversible, allowing the installation height to be adjusted.

Hoses: Use Tricoclair hose with a Ø 12 mm internal diameter for the entire seawater circuit and the pressurised flushing circuit.

Clamps: Fit 2 stainless steel hose clamps to every connection.

Clearance: Leave at least 3 cm below the filter housing so that the bowl can be removed. A spanner is supplied for tightening and loosening the bowl.

Fresh water flushing: Connect the flushing inlet to the pressurised circuit supplied by the boat's fresh water pump.

Solenoid valve: A solenoid valve behind the prefilter provides automatic flushing.

Valve position: Set the valve handle to the seawater position (see the 3 positions of the 3-way valve above).

For manual flushing, set the handle to the fresh water position (see the 3 valve positions above) and follow the instructions in section 7.2.

To replace the filter cartridge, follow the procedure in section 7.4.

During this procedure, take care not to lose the bowl O-ring. Fill the circuit with fresh water for 30 seconds to 1 minute, then return the handle to the seawater position (see the 3 valve positions above).

4.3


4 INSTALLATION

Water connections

- Hoses:** Use Tricoclair hose with a Ø 12 mm internal diameter for the seawater circuit and pressurised flushing.
- Clamps:** Fit two stainless steel hose clamps to each connection, with the screw housings on opposite sides.
- Fresh water inlet:** Connect the pressurised fresh water supply from the boat's fresh water pump outlet to the 3-way valve.
- Connection point:** This supply may be taken from a connection under a galley sink or washbasin, or from the pressurised **cold water piping**.
- Handle position:** The valve handle must be aligned with the filter.

INSTALLATION TIP
Where hoses pass through bulkheads or may contact sharp edges, protect them against wear and chafing by running them through a sleeve or a larger-diameter hose.

Identifying the three valve positions

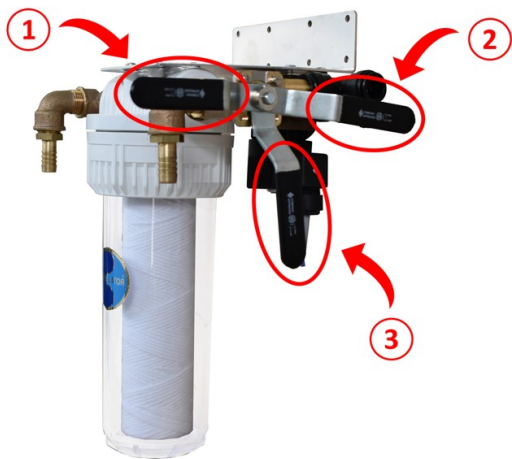


Position	Use
1 Seawater	Desalination mode
2 Fresh water	Manual flushing or preservation – section 7.2
3 Closed	Filter cartridge replacement – section 7.4

See section 7.2, page 26, for manual flushing and detailed valve illustrations.

4.4

4 INSTALLATION

Motor/pump assembly

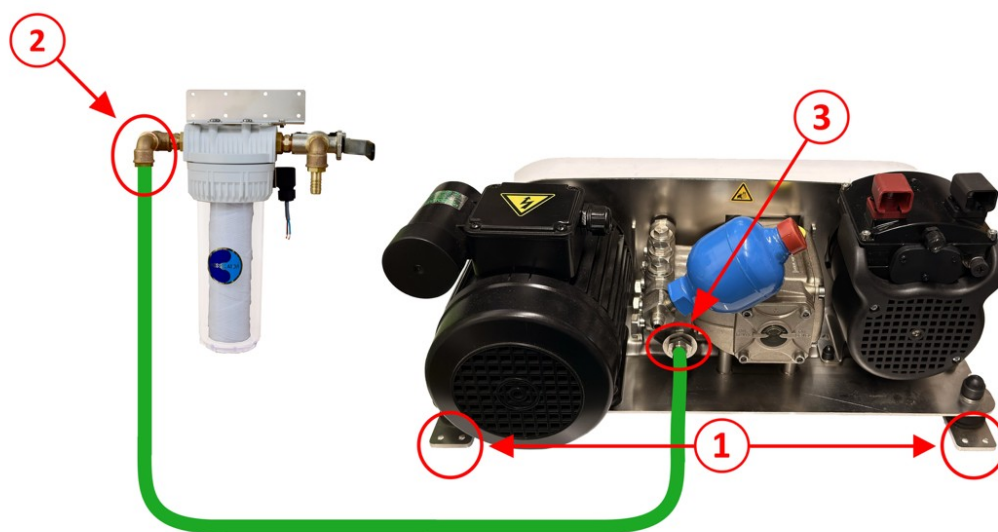

Seawater circuit · from the prefilter to the pump suction inlet

- 1** Stainless steel feet for mounting the motor assembly.
- 2** Prefilter outlet.
- 3** Pump suction inlet.

Green connection: Tricoclair hose with a Ø 12 mm internal diameter for the water circuit.

Location: For optimum output, install the high-pressure motor/pump assembly as low as possible in the boat, horizontally and protected from water splashes.

Mounting: Secure using the 2 stainless steel feet under the 2 motors, leaving a few centimetres of clearance around the assembly. **(Item 1.)**

Ventilation: Provide sufficient ventilation for the motors.

Connection: Connect the prefilter outlet to the pump suction inlet using Tricoclair hose with a Ø 12 mm internal diameter and 2 stainless steel hose clamps at each connection. **(Items 2 and 3.)**

High pressure: Connect the pump's high-pressure head to the membrane inlet (red marker) using high-pressure hose cut to length. Follow the fitting assembly instructions in Appendix A1 carefully.

Sealing: Apply a little liquid Loctite or **threadlocker to the male and female cones before connecting.**

4.5

4 INSTALLATION

Electrical supply

WARNING

Never work on live equipment! Disconnect the power supply to the entire installation.

Motor power supply

Observe the correct polarity when connecting the 12 or 24 Volt motor (see the wiring diagrams on page 13).

Fit the supplied 12 Volt or 24 Volt fuse holder, as appropriate for the supply voltage.

Cable sizes by supply voltage**12 V MOTOR**

Use cable with an adequate cross-sectional area:
35 to 50 mm² for 12 Volts.

24 V MOTOR

Use cable with an adequate cross-sectional area:
35 mm² for 24 Volts.

Control cable and permanent power supply

Control cable: The cable is 5 metres long and has a keyed connector. See section 4.8, cable no. 5.

Control panel supply: The control panel must always have a DC power supply.

CONNECTION GUIDE


The DC connections are shown on page 13 and the AC connections on page 14. Observe DC polarity and install the supplied fuse holder.

4.5

4 INSTALLATION

12 V and 24 V connections

12 V motor

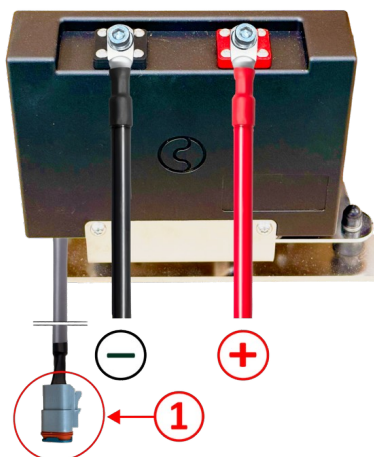


- 1** Electrical connector.
- +** Connect the positive battery cable.
- Connect the negative battery cable.

Connector detail · item 1

**ELECTRICAL PROTECTION**

Remember to fit the fuse holder.

24 V motor

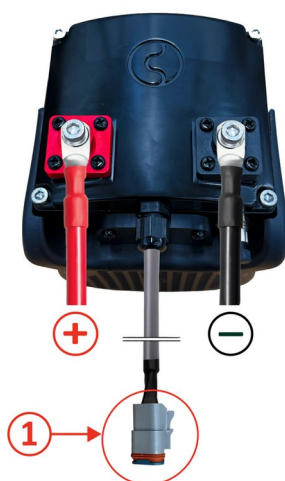

- 1** Electrical connector.
- +** Connect the positive battery cable.
- Connect the negative battery cable.

Connector detail · item 1

**ELECTRICAL PROTECTION**

Remember to fit the fuse holder.

4.6


4 INSTALLATION

120 V and 230 V AC connections

WARNING

Never work on live equipment! Disconnect the power supply to the entire installation.

Connect the 120 / 230 V AC motor to the cable from the control panel (section 4.8).

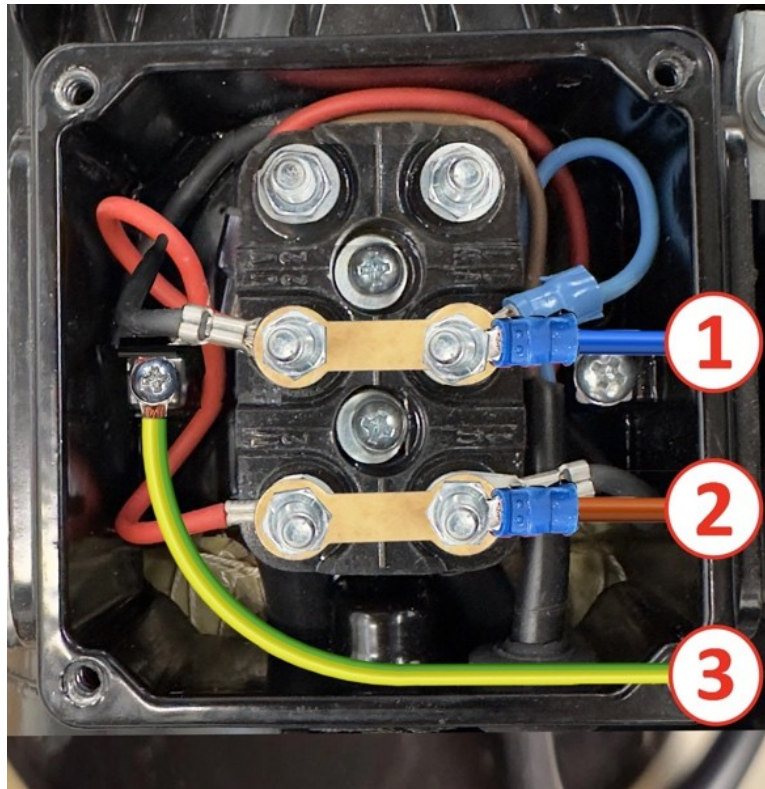

1 Neutral · blue wire

2 Live · brown wire


3 Earth · yellow / green wire

The control panel must always have a DC power supply.

4.7

4 INSTALLATION

Membrane assembly

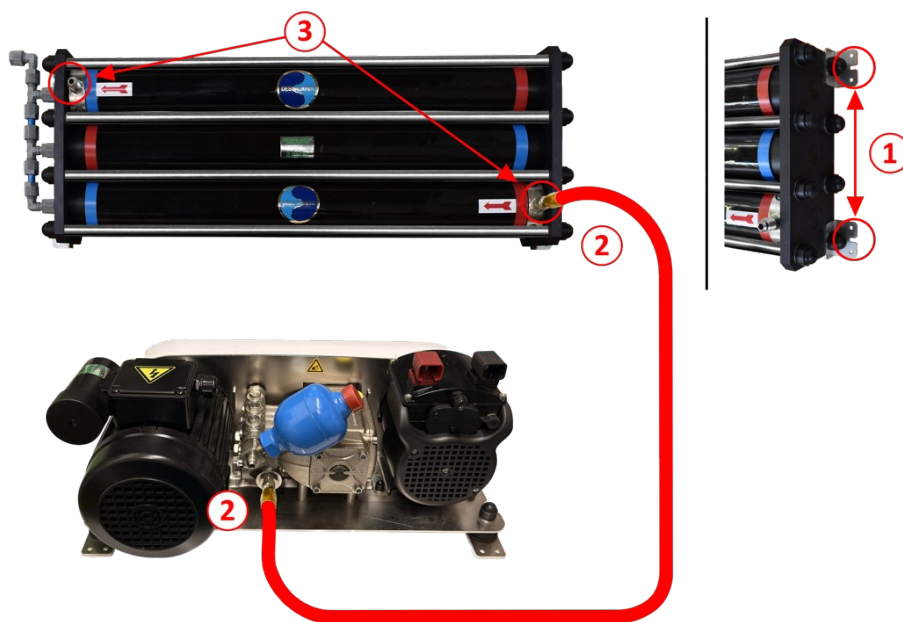

Mounting points, high-pressure connection and swivel fitting

- 1** Stainless steel feet for mounting the membrane assembly.
- 2** Connection from the high-pressure pump to the membrane assembly inlet (red side).
- 3** Membrane end caps (optional 90° elbow fitting for membrane end caps).

Black high-pressure water hose (supplied).

Installation and connections

Location: Preferably install the membrane assembly horizontally, either flat or on its side.

Position: Vertical installation may result in reduced output over time.

Mounting: Secure the stainless steel brackets using Parker self-tapping screws. **(Item 1.)**

High-pressure connection: Protect the hose between the high-pressure pump outlet and the membrane inlet with a sleeve, as it vibrates. Securing it directly or allowing it to contact other objects may cause leaks. **(Item 2.)**

Fittings: Assemble the high-pressure fittings in accordance with their instructions (see Appendix A1).

Threadlocker: Apply a little Loctite-type threadlocker to both the male and female cones before tightening.

Option: A 90° high-pressure elbow fitting is available for the membrane inlet and outlet. **(Item 3.)**

4.8


4 INSTALLATION
Control panel

Mounting the panel

Mount the control panel on a vertical surface.
Leave access behind the panel to facilitate connections.
Choose a position where the indicators can be seen easily.

Suggested locations

Examples: below or beside lockers, beneath chart table or saloon seats, or on the forward panel of an aft berth.

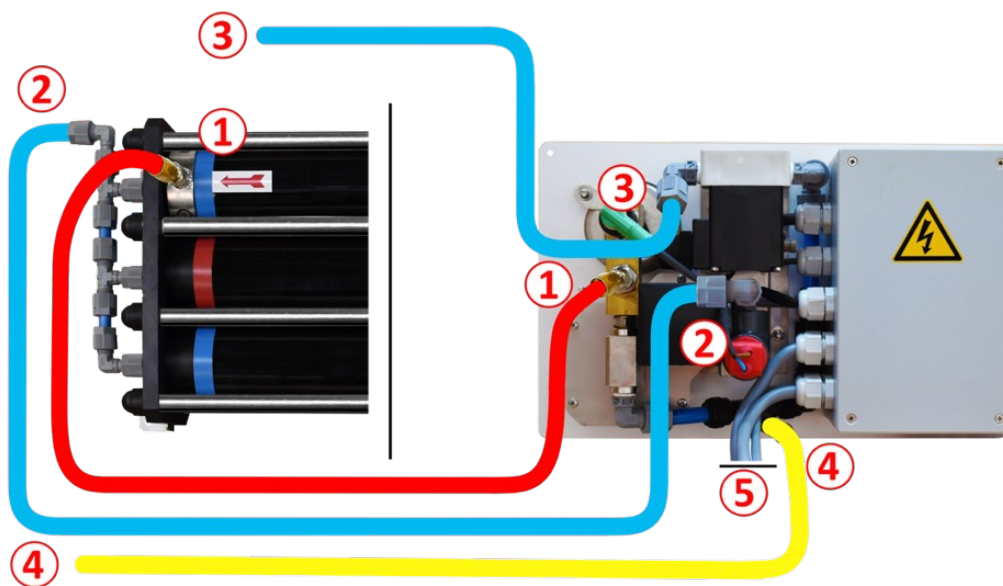

Control panel · items 1 to 5 and electrical connections

- 1 Connect the high-pressure outlet of the membrane assembly to the high-pressure regulator manifold behind the control panel. (Black high-pressure hose supplied.)
- 2 Connect the membrane product water outlet to the control panel sensor inlet. (10 mm outside diameter hose supplied.)
- 3 Hose connecting the panel's fresh water outlet to the tanks, the distribution manifold, the fresh water pump inlet or a tee, provided there is no non-return valve at the tank outlet. (Ø 10 mm internal-diameter hose, preferably Tricoclair, not supplied.)
- 4 Hose for the control panel reject water outlet. Preferably connect to a dedicated outlet, or to an existing galley sink, washbasin or cockpit drain. In that case, remember to open the drain seacocks during operation. (Ø 12 mm internal-diameter hose not supplied.)
- 5 12 V or 24 V DC supply, with a keyed connector from the DC motor (see section 4.5).
- 6 230 V or 120 V AC supply. Fit the supplied circuit breaker on this line unless a circuit breaker is already available on the boat's AC panel.
- 7 230 V or 120 V AC motor supply. See section 4.6, page 14.

5.1

5 COMMISSIONING

Before starting

PRE-START CHECK

Before switching on, check that the valves are open.

Purging and filling the circuit

Before first use, after changing the filter, after the boat has been ashore or after a long period of inactivity, purge the circuit with fresh water using the 3-way valve on the prefilter (see section 7.2).

Run this operation for 1 minute with the watermaker stopped and the pressure regulator open (turned anticlockwise).

Once the circuit is completely filled, return the valve to the seawater position (see section 7.2).

Maintaining the power supply

Take account of battery capacity (in amperes) and the operating time.

For 12 or 24 V operation lasting more than 5 minutes, it is advisable to run the boat's engine.

AFTER A PERIOD OF INACTIVITY

If the watermaker will remain unused for more than 1 month, preserve the membranes for storage (maximum 6 months) or flush them at least monthly. Before restarting the system, it is also advisable to flush it for 2 minutes (see section 7.2).

5.2


5 COMMISSIONING

Starting in manual mode



The sequence below corresponds to the red items 1 to 5 in the illustrations. Increase the pressure gradually, following the pressure gauge indications.

- 1** Make sure the seacock is open and the prefilter valve is in the seawater position. Fully open the pressure regulator to minimum (–), anticlockwise. Set the selector to 12 / 24 V DC or 230 V (120 V) AC.
- 2** Wait a few seconds until the yellow LED flashes. Using the regulator knob, increase the pressure slightly until the gauge needle reaches the 8 o'clock position. Hold this setting for approximately one minute.
- 3** Then increase the pressure to the 9 o'clock position on the gauge using the regulator knob. Hold this setting for approximately one minute.
- 4** Increase the pressure again to the 11 o'clock position on the gauge using the regulator knob. Hold this setting for approximately one minute.
- 5** You can now increase the pressure until the gauge needle reaches the green zone. When the water quality LED turns green, your watermaker is producing fresh water.

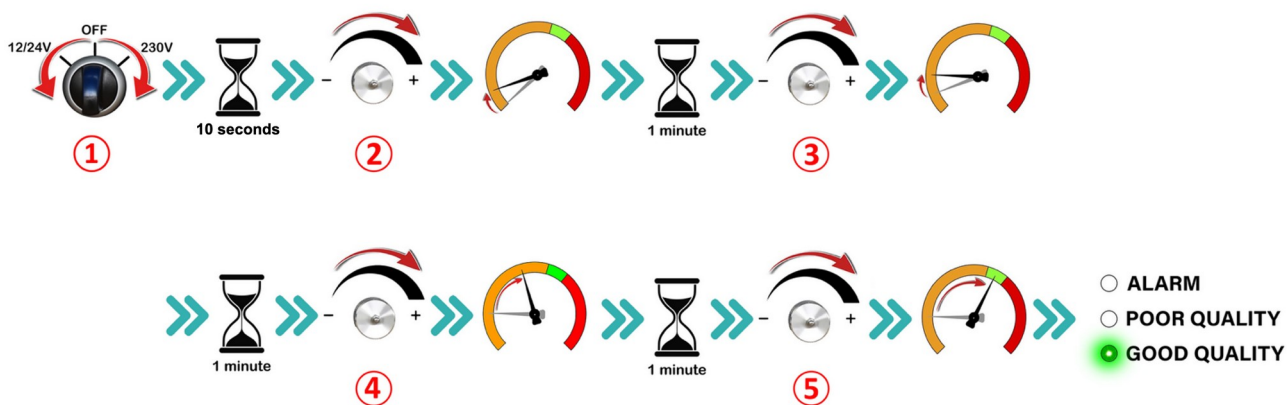

Items 1 to 5 · gradual pressure increase and water quality indication

NOTE

Fresh water output depends on seawater temperature and salinity.

5.3

5 COMMISSIONING

Automatic mode and stopping

Starting in automatic mode

The AUTOMATIC and NAVIGATOR range has a motorised pressure regulator. Set the selector to 12 / 24 V DC or 230 V (120 V) AC: the regulator automatically raises the pressure to the orange zone, then gradually adjusts it into the green zone of the pressure gauge.

This procedure takes approximately 3 minutes.

Once this procedure is complete, the watermaker checks the water quality and then begins producing fresh water.



Automatic start-up sequence

FRESH WATER PRODUCTION

Fresh water output depends on seawater temperature and salinity.

Stopping without flushing

There is no need to flush the membranes if the watermaker is used regularly.

(At least once every 3 weeks.)

- 6 Set the switch to OFF. The watermaker stops.
- 7 Turn the pressure regulator knob anticlockwise to its minimum (–) position.



Stopping without flushing

Maintenance according to the length of shutdown

After more than 3 weeks without use, it is preferable to flush the membranes (see the manual flushing procedure in section 7.2).

Repeat this flush every 3 weeks while the watermaker remains unused.

5.4

5 COMMISSIONING

Stopping with automatic flushing

Stopping with flushing

Flush the watermaker if it will remain unused for more than 3 weeks.



Automatic flushing and shutdown sequence · items 6 to 8

- 6** After using the watermaker, do not switch it off. Begin turning the pressure regulator knob anticlockwise towards its minimum (–) position to initiate automatic flushing.
- 7** The gauge pressure will fall. Continue turning the knob to its minimum (–) position. The watermaker will then start the flushing procedure. The green and yellow LEDs on the control panel light up to indicate that flushing has started. This lasts 30 seconds. Once flushing is complete, the green and yellow LEDs go out; only the flashing blue LED on the switch remains on.
- 8** You can now switch off the watermaker by setting the switch to OFF. Always wait until flushing is complete before switching off.

5.5

5 COMMISSIONING

Optional Micro Remote Control

The Dessalator® Micro Remote Control allows you to restart, stop and flush your watermaker and monitor its status (only with Automatic and Navigator versions).

The 3 indicators on the Micro Remote Control have the same functions as the 3 indicators on the watermaker itself.

The Mini Remote Control is intuitive to use. This quick guide therefore covers only the basic functions for the user's reference.



Identify the indicators and the two buttons



- 1 RED INDICATOR – ALARM
- 2 YELLOW INDICATOR – POOR WATER QUALITY
- 3 GREEN INDICATOR – GOOD WATER QUALITY
- 4 BLUE INDICATORS – DC AND AC STATUS
- 5 DC / AC BUTTONS

IF AN ALARM OCCURS

Following an alarm, the machine must be restarted from its control panel
(not from the Micro Remote Control).

5.6

5 COMMISSIONING

Starting with the Micro Remote Control

After the initial start-up from the control panel, Automatic and Navigator versions can be stopped, restarted or flushed using the Micro Remote Control. On other versions, the Micro Remote Control can be used to monitor system status or stop the watermaker.

Starting from standby


- 1 Hold the DC or AC button for about 2 seconds

To start on DC power, press DC; to start on AC power, press AC. Hold the button for about 2 seconds: its BLUE LED flashes and the buzzer sounds twice.



- 2 Release the button

When you release the button, the watermaker starts.

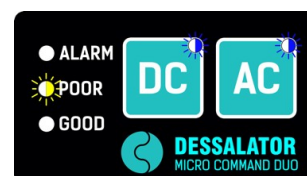

Monitoring production

The RED, YELLOW and GREEN LEDs show the same indications as those on the watermaker control panel.

YELLOW LED · pressure indication

The YELLOW LED's flashing rate indicates the water pressure in the system: faster flashing means higher pressure.



GREEN LED · good water quality


The BLUE LED indicates the power supply in use (DC or AC). When the product water quality is good, the GREEN LED lights up.




OPERATING TIP

To extend membrane life, increase the water pressure inside the system slowly. If you intend to start the watermaker frequently using the Micro Remote Control, we strongly recommend a machine with automatic pressure regulation, such as the Automatic or Navigator series.

Indicator legend



On



Flashing



Off

5.7

5 COMMISSIONING

Stopping with the Micro Remote Control

Stopping without automatic flushing

- 1 Hold the DC or AC button for about 2 seconds

To stop the watermaker normally, hold the button for the power supply in use (DC or AC) for about 2 seconds.

- 2 Release the button

When you release the button, the watermaker stops and enters STANDBY mode.



Stopping with automatic flushing

REMOTE FLUSHING WITH THE MICRO REMOTE CONTROL

Automatic flushing can be started remotely using the Micro Remote Control only on Automatic and NAVIGATOR models.

- 1 Hold the DC or AC button for about 5 seconds

To stop with an automatic flush, hold the button for the power supply in use (DC or AC) for about 5 seconds.

- 2 Release the button at the signal


Keep the button pressed until the YELLOW and GREEN LEDs light up and the buzzer emits a long beep. When you release the button, the watermaker stops and the automatic flushing cycle starts.

- 3 Flushing ends and standby begins

The automatic flushing cycle finishes before the system enters STANDBY mode.



Indicator legend



On



Flashing



Off

6

6 OPERATION

Operating conditions

Output and service life

Reverse osmosis membranes are the most sensitive components in your system and require careful maintenance. Follow these instructions to avoid damage and invalidating the warranty. Watermaker output ratings are based on a seawater temperature of 25°C and depend on salinity in your operating area. Each degree below this temperature reduces output by 2.5 to 5%.

Extreme temperatures

Do not expose the membranes to temperatures below 0°C. Overpressure caused by expansion during freezing can tear the membranes and prevent salt rejection.

Do not expose the membranes to temperatures above 60°C either, as this may prevent salt rejection.

Storage and use

After first use, the membranes must remain immersed in a liquid: treated seawater, fresh water with preservation solution, or temporarily fresh water (see preservation methods in section 7.3).

Seawater quality and salinity affect membrane output.

WATER QUALITY

Use of this system in muddy or polluted water, at river mouths or in brackish water is prohibited. Avoiding these conditions helps prevent prefilter fouling and membrane damage.

7.1

7 MAINTENANCE

Membranes and HP pump

Membrane maintenance

A 10 to 15% reduction in output over time is normal.

If output is no longer satisfactory, consider replacing the membranes.

Your watermaker's output stabilises during the first 24 or 48 hours of operation. Fresh water output depends on seawater salinity, temperature and membrane operating pressure.

Membrane service life depends on correct operation and maintenance.

Flushing frequency

There is no need to flush the membranes after every use. Excessively frequent flushing can cause premature membrane deterioration.

There are two ways to flush the system: manually or automatically.

Both methods use water from the boat's tanks.

Flush the watermaker before any period of inactivity lasting more than a few days.

REMINDER

All flushing procedures must be carried out with the motor/pump assembly stopped. Pressurised fresh water is particularly harmful to the membranes.

FROST PROTECTION

If freezing is possible, drain the flowmeter on the control panel, disconnect the blue product water hose and blow or inject air into it while intermittently pressing the small button on the solenoid valve behind the control panel. Also protect the membranes from the cold with blankets or insulation.

High-pressure pump

Oil and level: The high-pressure pump is half-filled with oil, up to the mark on the sight glass. The pump uses 15W40 or 20W40 multigrade oil.

Filling: Do not exceed the level shown on the sight glass. This oil does not need to be changed over time.

7.2

7 MAINTENANCE


Manual flushing

A valve beside the prefilter is connected to the boat's fresh water circuit. Turning it automatically starts the boat's fresh water pump and sends fresh water from the tank through the watermaker.


- 1** Do not switch the watermaker ON; leave it OFF.
- 2** Turn the pressure regulator fully anticlockwise.
- 3** Open the fresh water inlet valve beside the prefilter for 2 minutes. The boat's pump starts and fresh water flows through the watermaker.

Your DESSALATOR® has automatic flushing. If you choose manual flushing, use the positions shown below.

Normal position

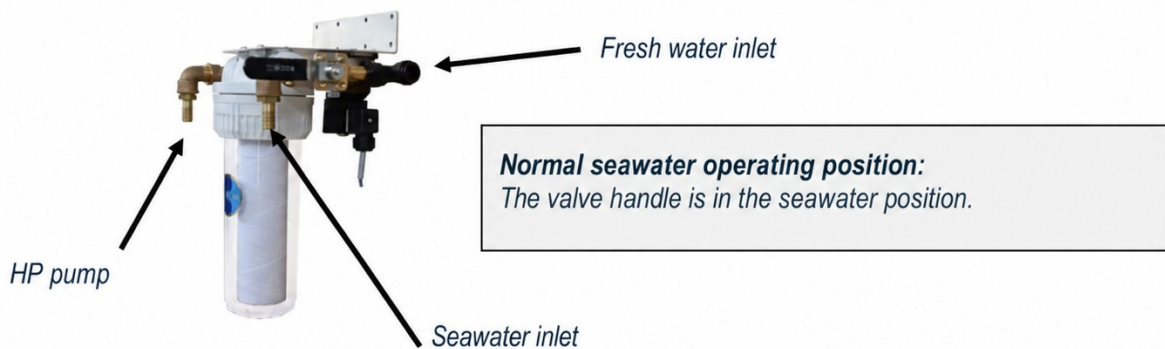

Manual flushing position

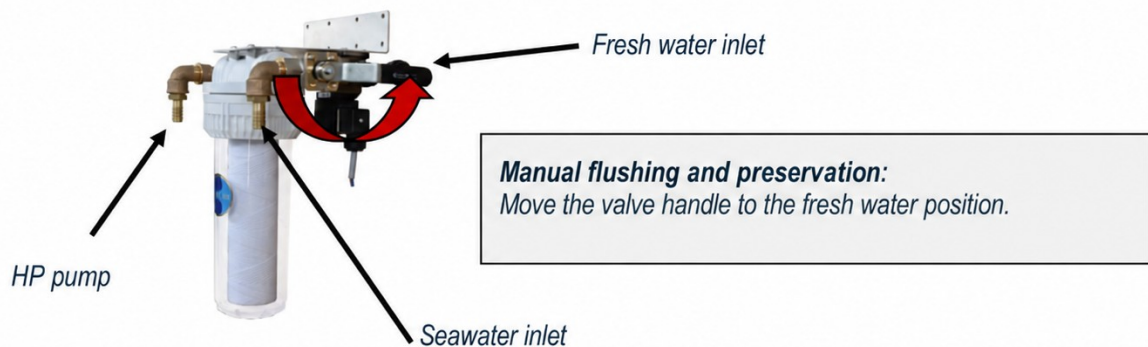

Valve positions for operation and manual flushing

Seawater position: desalination mode. Fresh water position: manual flushing or preservation. Closed position: filter cartridge replacement (see section 7.4).

Automatic flushing: see section 5.4, page 20.

7.3

7 MAINTENANCE

Membrane preservation

When to preserve the membranes

Regular monthly flushing is usually sufficient to maintain the membranes. If the watermaker is unused and monthly flushing is not possible, preservation is required. The preservative protects for no more than 6 months. Never repeat preservation more than twice a year, and always flush with fresh water between the two treatments.

DOSAGE PRECAUTIONS

Excessive preservative concentration can corrode the membrane end caps. We recommend the ST2 preservation cartridge and our specified preservative dose for your machine. Failure to follow these recommendations, or using other preservatives, invalidates all warranty coverage.

Choosing a preservation method**ST2 cartridge**

Easy method using the reusable ST2 preservation cartridge: We have developed a cartridge that makes preservation much easier. Instructions are given in section 7.4.

Manual method

Manual method without the ST2 cartridge: With the watermaker stopped, flush thoroughly with fresh water for 10 minutes using the 3-way valve on the prefilter. Pour the entire sachet of preservative into a bucket containing 8 litres of water. Disconnect the seawater inlet hose and place it in the bucket. Start the watermaker without increasing the pressure and run it until the bucket is empty. When the bucket is empty and the operation is complete, reconnect the hose.

Garden sprayer

Garden sprayer method: Pour the sachet of preservative into a bucket containing 8 litres of fresh water and mix. Fill the sprayer with this solution and pressurise it to 3 or 4 bar. Then inject the preservative into the membrane inlet (red marker side).

BEFORE USING THE WATERMAKER AGAIN

Before using the watermaker again, flush briefly with fresh water using the 3-way valve on the prefilter to remove the preservative.

7.4

7 MAINTENANCE

ST2 preservation cartridge

BEFORE YOU BEGIN

Watermaker stopped. The ST2 cartridge is reusable.

Preparing the cartridge and prefilter

- 1 Set the 3-way valve to the flushing position (see section 7.2). The control panel pressure regulator knob must be fully open, turned anticlockwise.
- 2 After 5 minutes, turn the 3-way valve to the closed position to shut off all water supply.
- 3 Close the seawater inlet seacock.
- 4 Open the preservation cartridge, taking care not to lose the O-ring.
- 5 Remove the upper grid.



Removing the 5-micron cartridge

Preparing the ST2 cartridge

- 6 Place the foam at the bottom of the filter.
- 7 Pour the powder into the cartridge.
- 8 Refit the upper grid and close the cartridge.
- 9 Check that the seal is correctly seated.
- 10 Remove the 5-micron filter from the prefilter.
- 11 Replace the filter with the preservation cartridge.

Steps 12 to 14 and recommissioning continue on the next page.

7.4

7 MAINTENANCE

Preservation and recommissioning

- 12 Close the prefilter bowl, ensuring that the O-ring at the top of the bowl is correctly seated.
- 13 Turn the 3-way valve to the fresh water position. The bowl fills with water and the preservative powder dissolves. Leave a small amount of preservative powder on the foam pad, then return the valve to the closed position.
- 14 Three hours after preservation, you must flush the membranes for 5 minutes to remove excess preservative. Turn the 3-way valve to the fresh water position, let the water flow for 5 minutes, then return the valve to the closed position.



Fitting the ST2 cartridge

PRESERVATION PERIOD

Preservation lasts a maximum of 6 months. After this period, repeat the entire procedure in this manual.

Before the next start-up

- 1 **IMPORTANT:** Before the next start-up, flush the watermaker thoroughly with fresh water. To do this, turn the 3-way valve to the fresh water position for 15 minutes.
- 2 Then turn the 3-way valve to the closed position to shut off all water supply.
- 3 Finally, remove the preservation cartridge and fit a new 5-micron filter.

Note: The ST2 cartridge is reusable.

8

8 PARTS AND ACCESSORIES

Spare parts

DESSALATOR® equipment is reliable and has a long service life, so costly overhauls are generally unnecessary. However, accidental damage is always possible (running without water, accidental overpressure, impact, etc.).

The following spare parts and maintenance items are available:

Maintenance parts

10-inch, 5-micron filter

Drive belt

Circuit board

Membrane end cap

High-pressure pump seals and valves

High-pressure hose, sold by the metre

Available accessories

Mini Remote Control

Micro Remote Control

Complete ST2 preservation cartridge

Preservative sachet

Remineralisation cartridge

Remineralisation sachet

High-pressure hose fitting

High-pressure elbow fitting

9.1

9 TROUBLESHOOTING

Diagnosis and solutions

OBSERVED PROBLEM	CHECKS AND REMEDIES
Leak at the pressure regulator behind the control panel	<p>CAUSES</p> <p>Loose regulator packing gland</p> <p>SOLUTIONS</p> <p>Tighten the packing gland with a 17 mm open-ended spanner.</p>
Noisy HP pump	<p>CAUSES</p> <p>Restricted water supply or air ingress.</p> <p>Incorrect operating pressure.</p> <p>SOLUTIONS</p> <p>Check the hose diameter, clamp tightness and filter cleanliness.</p> <p>Operate within the green zone.</p>
Oil leak from the HP pump	<p>CAUSES</p> <p>Worn seals on the connecting rods</p> <p>SOLUTIONS</p> <p>Replace the seals.</p>
Insufficient water output	<p>CAUSES</p> <p>Water too cold.</p> <p>Dirty prefilter.</p> <p>Inadequate power supply.</p> <p>Voltage drop along the power cable.</p> <p>SOLUTIONS</p> <p>Replace the prefilter.</p> <p>Recharge the batteries. Check the connections.</p> <p>Fit a cable with a larger cross-sectional area.</p>
Water leaks beneath the high-pressure head	<p>CAUSES</p> <p>Worn seals</p> <p>SOLUTIONS</p> <p>Replace the piston seals.</p>
No pressure	<p>CAUSES</p> <p>Insufficient water</p> <p>SOLUTIONS</p> <p>Open the seacock.</p> <p>Check that the hoses are not kinked.</p>

9.2

9 TROUBLESHOOTING

Indicator guide


Operation

RED • YELLOW • GREEN	DESCRIPTION AND ACTION
  	System test at start-up If these indicators remain on, open the regulator (–) to reduce the pressure.
  	Pumps running • Waiting for production pressure Turn the pressure regulator slowly clockwise (+) until the gauge needle reaches the green zone.
  	Production pressure OK • Waiting for good water quality Please wait: once the water quality is acceptable, the machine automatically starts producing water.
  	Water production Water quality is good: fresh water is being produced.
  	Automatic flushing Please wait: flushing lasts 30 seconds.

Alerts and alarms

RED • YELLOW • GREEN	DESCRIPTION AND ACTION
  	Insufficient pressure The pressure is too low.
  	Alarm 1-1 • Timeout: pressure too low Did the pump start first? Check the seawater inlet seacock and prefilter. Restart and try again.
  	Alarm 1-2 • Pressure sensor power supply fault If the machine enters an alarm state after start-up, the pressure sensor may be faulty or the system voltage may be too low.
  	Alarm 2-1 • Pressure too high Switch off the watermaker, open the regulator fully (–), then restart the machine.

Indicator legend



On



Flashing



Off


Indicator order: red • yellow • green

A1

APPENDIX A1

Assembling high-pressure fittings

- 1 Screw the brass fitting sleeve anticlockwise onto the high-pressure hose until it reaches the vertical mark on the outside of the fitting.

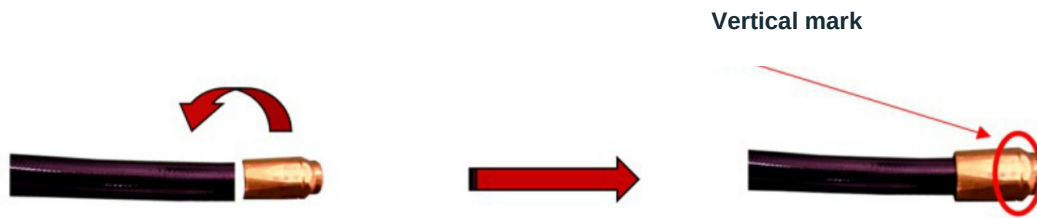

- 2 Insert the brass plug into the stainless steel nut and tighten firmly.



- 3 Apply a little grease to the tip of the stainless steel cone and screw it straight into the brass fitting. Stop when the stainless steel thread has disappeared inside the brass fitting, leaving approximately 7 mm between the nut and the brass sleeve.



- 4 Unscrew the nut from the conical adaptor. The fitting is ready for the hose between the pump and the membrane. Protecting it with another hose is a sensible precaution against vibration.




- 5 **IMPORTANT:** Make sure the fitting has not blocked the hose: blow through it or insert a screwdriver to check that the passage is clear.

ON REASSEMBLY

Apply Loctite or threadlocker to the male and female cones when reassembling.

A2


APPENDIX A2
Circuit board wiring diagram

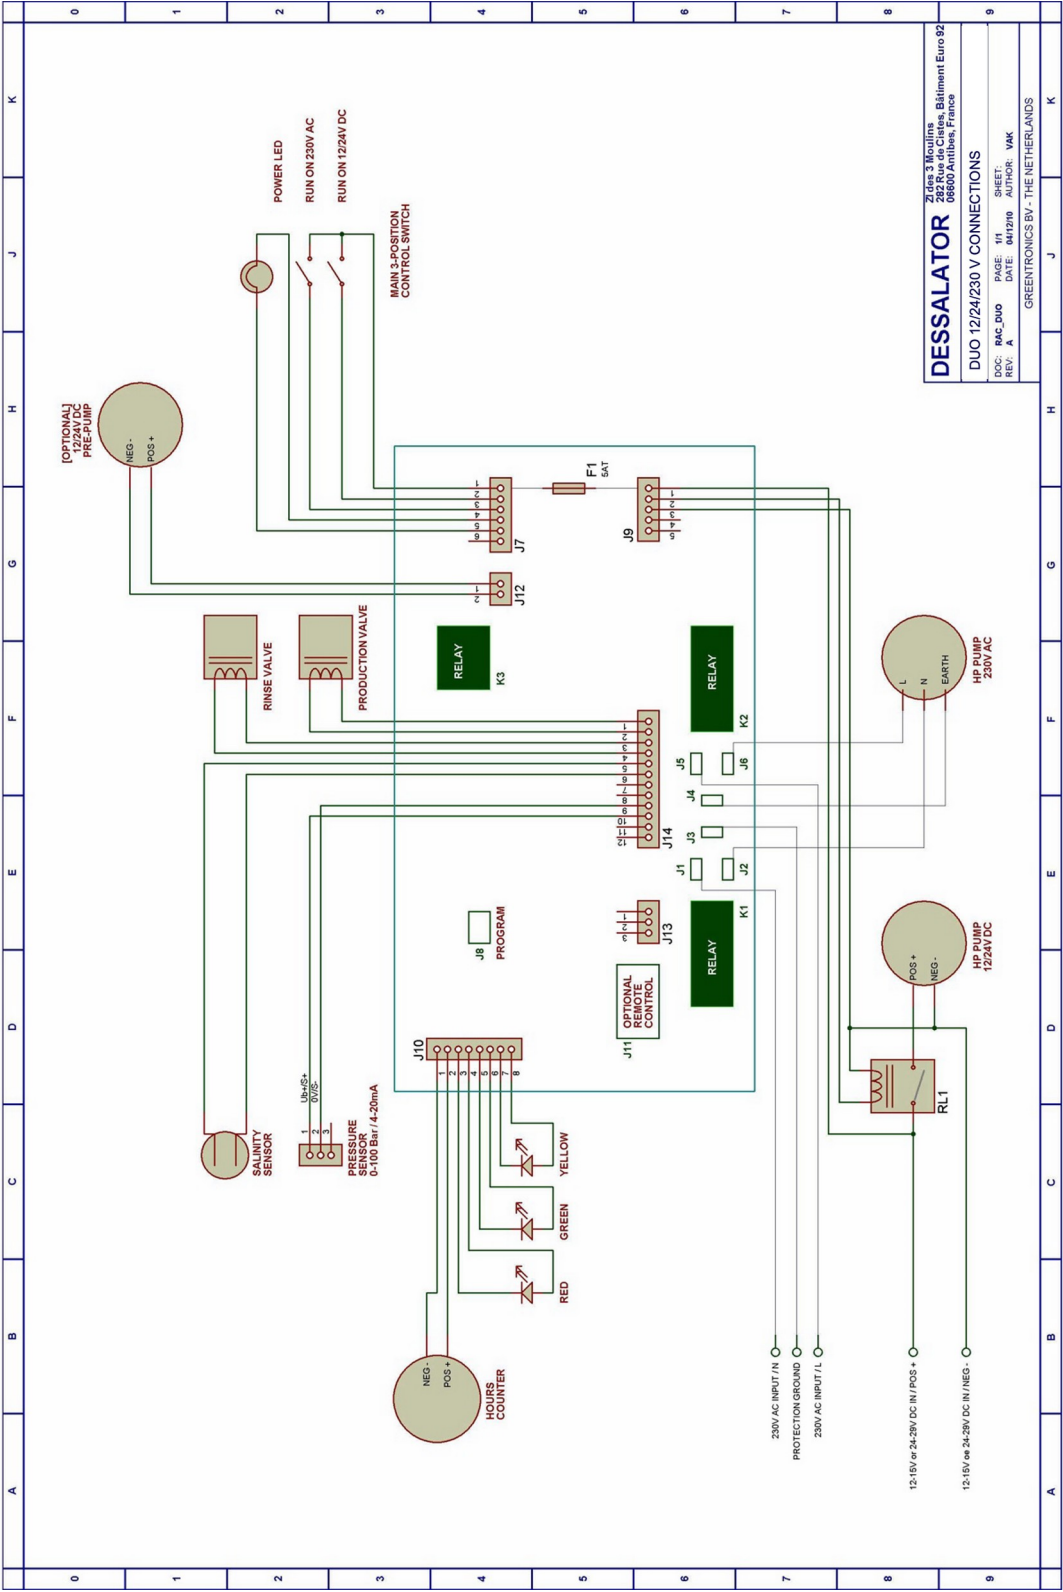

A3

APPENDIX A3


DUO D60 installation diagram

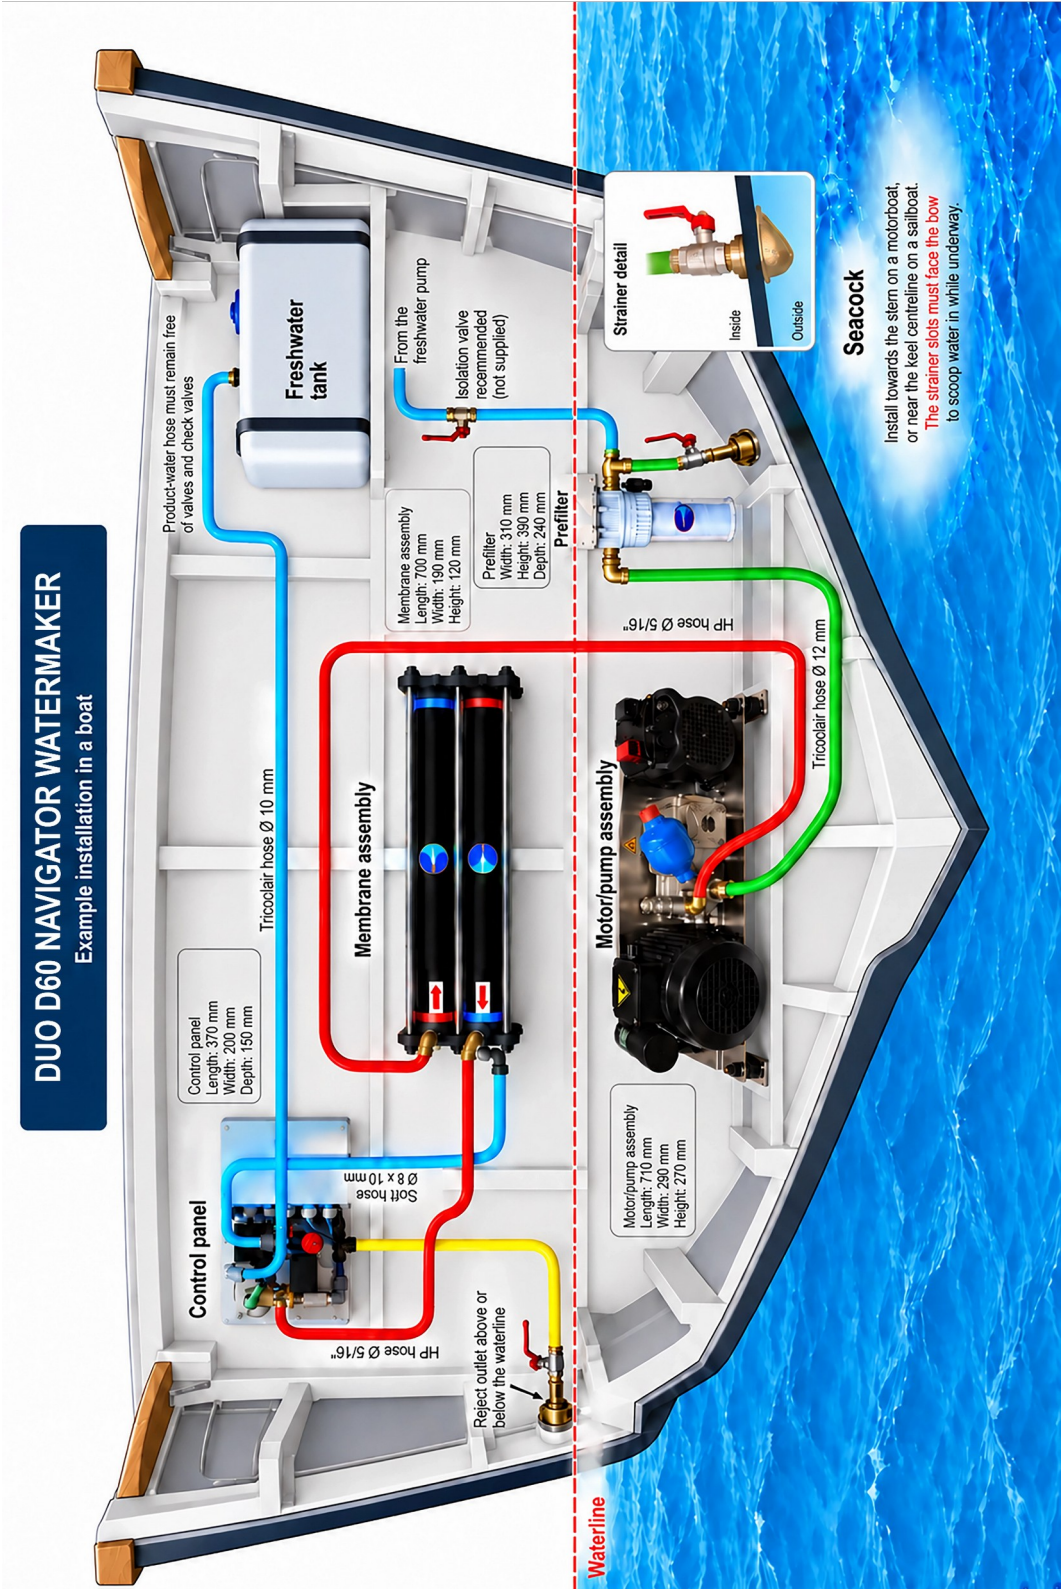

A4

APPENDIX A4

DUO D100 installation diagram

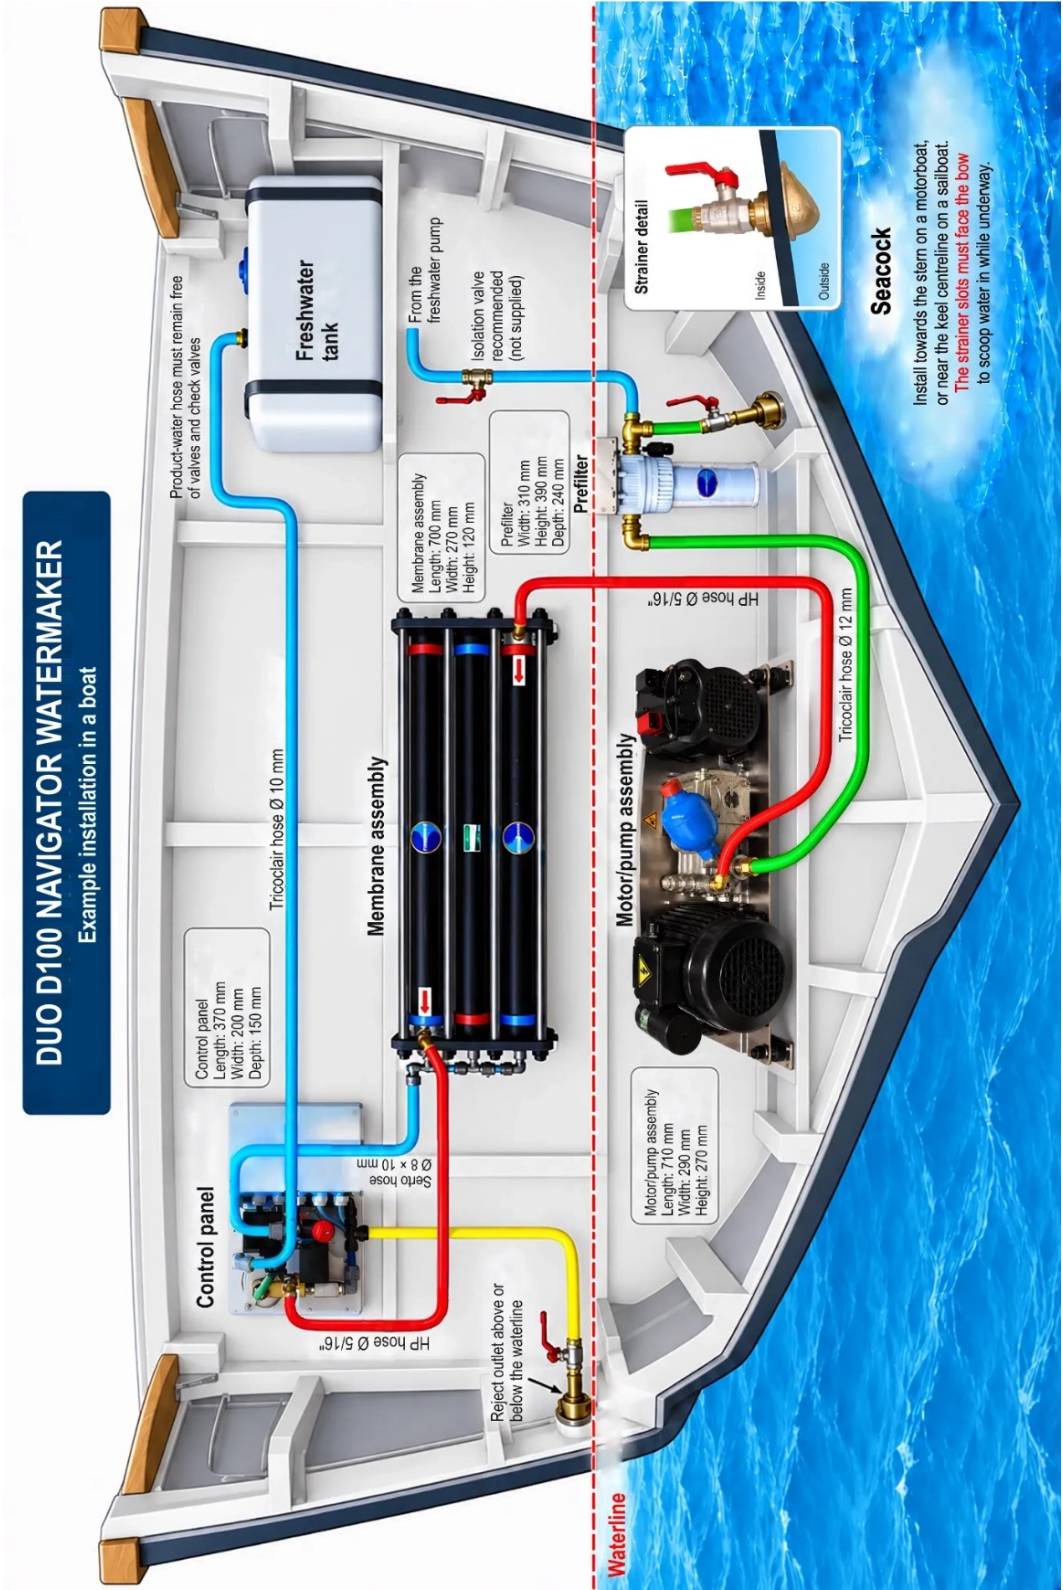



DC/AC

DESSALATOR

Support and contact details

DUO DC-AC D60 & D100

OPTIMA & NAVIGATOR/ 12 / 24 VDC AND 120 / 230 VAC

Manufacturer

Dessalator®
ZI des 3 Moulins, 282 rue des Cistes
Euro 92 Building
06600 Antibes, France

Contact

www.dessalator.com
contact@dessalator.com
+33 4 93 95 04 55

ENGLISH EDITION
Version 4.2 EN • 10/2026